


BED FRAME

Assembly Instructions

Model: HM-BF001M F/Q/K

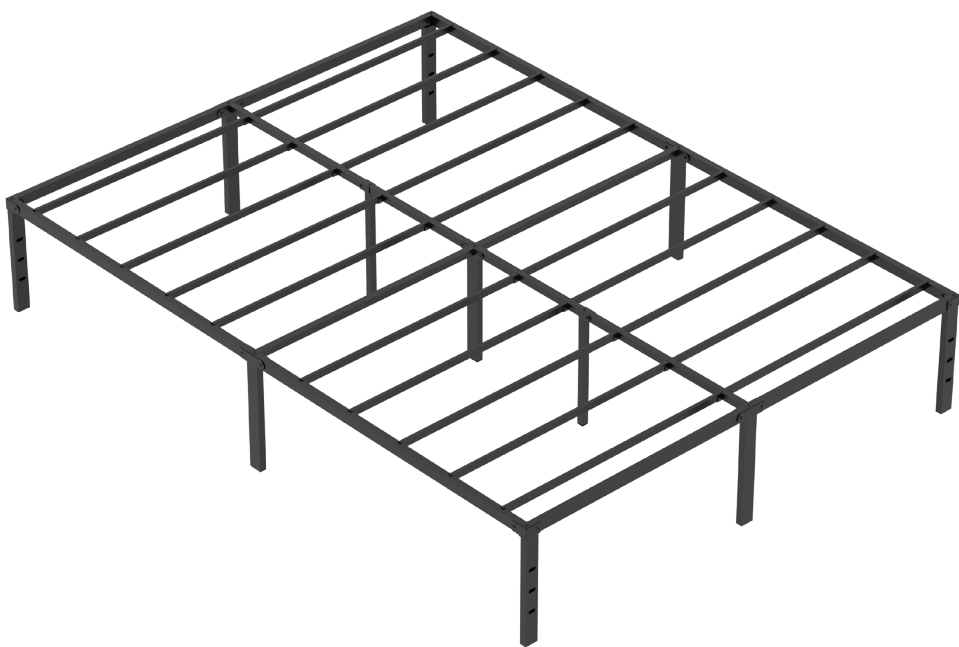

Give us a chance to make it right.

If you have any questions about the product, please do not hesitate to contact us through your order page. Thank you for your support!

Components

E




Qty: 2

F



Qty: 2

G



Qty: 1

P


With Screw Holes



Qty: 2

H

Without Screw Holes



Qty: 20

Hardware & Tools

L



M6×40 Bolt

Qty: 8


O



M6 Nut

Qty: 4

J



M6×35 Bolt

Qty: 7

N



Allen Key

Qty: 1

R





Wrench

Qty: 1

Step 1

(Unfold and layout E as shown.)

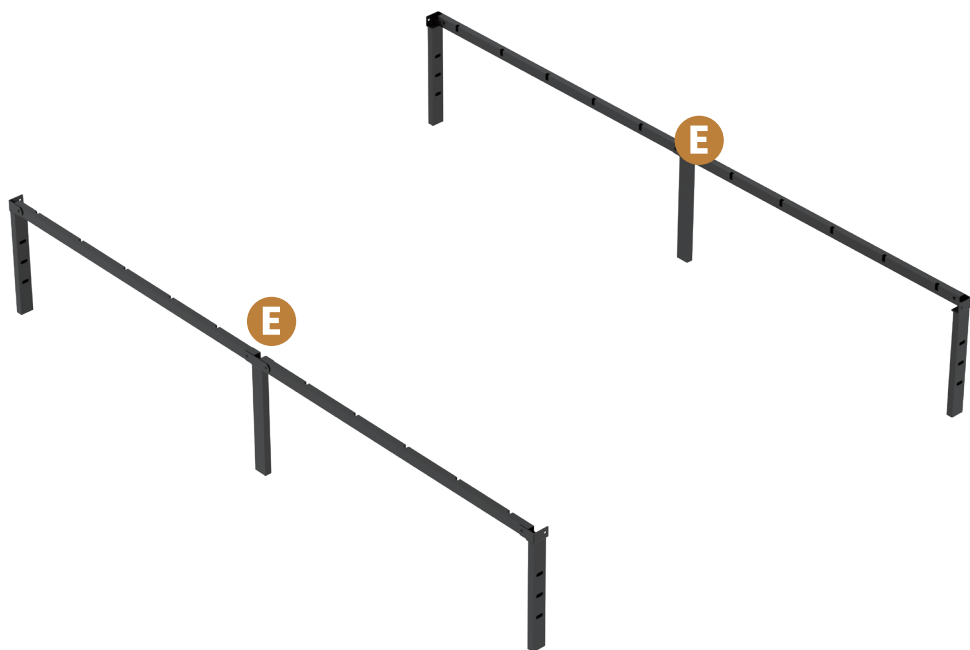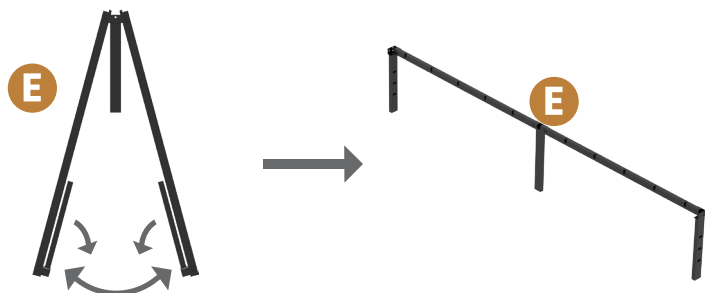


Note:

For easier assembly, do not fully tighten the screws until all parts are in place.


Step 2

(Unfold and layout F as shown.)

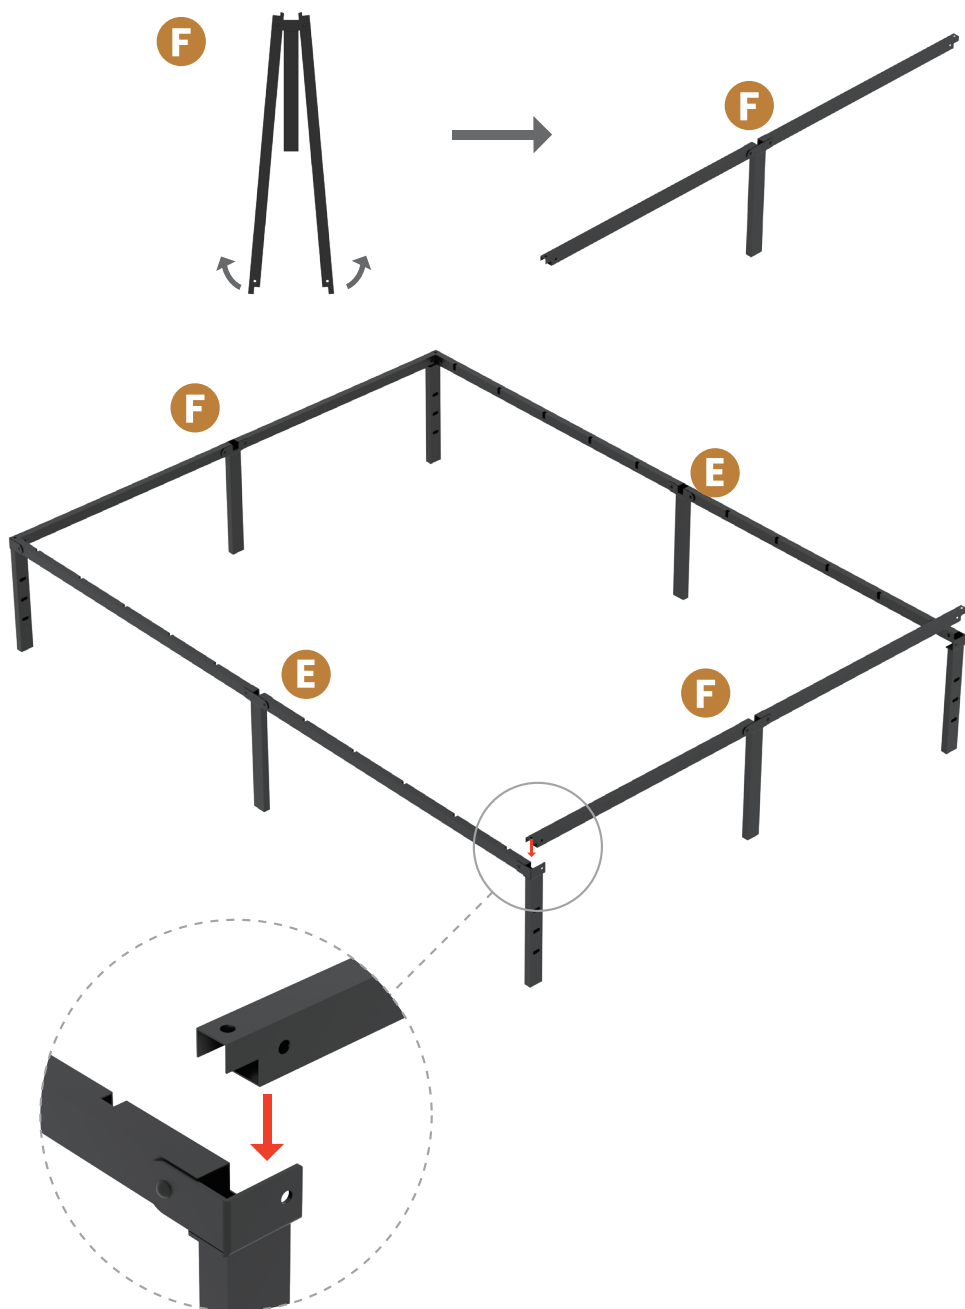

Step 3

(Attach Part E to Part F using Bolt L, Bolt J, and Nut O as shown.)

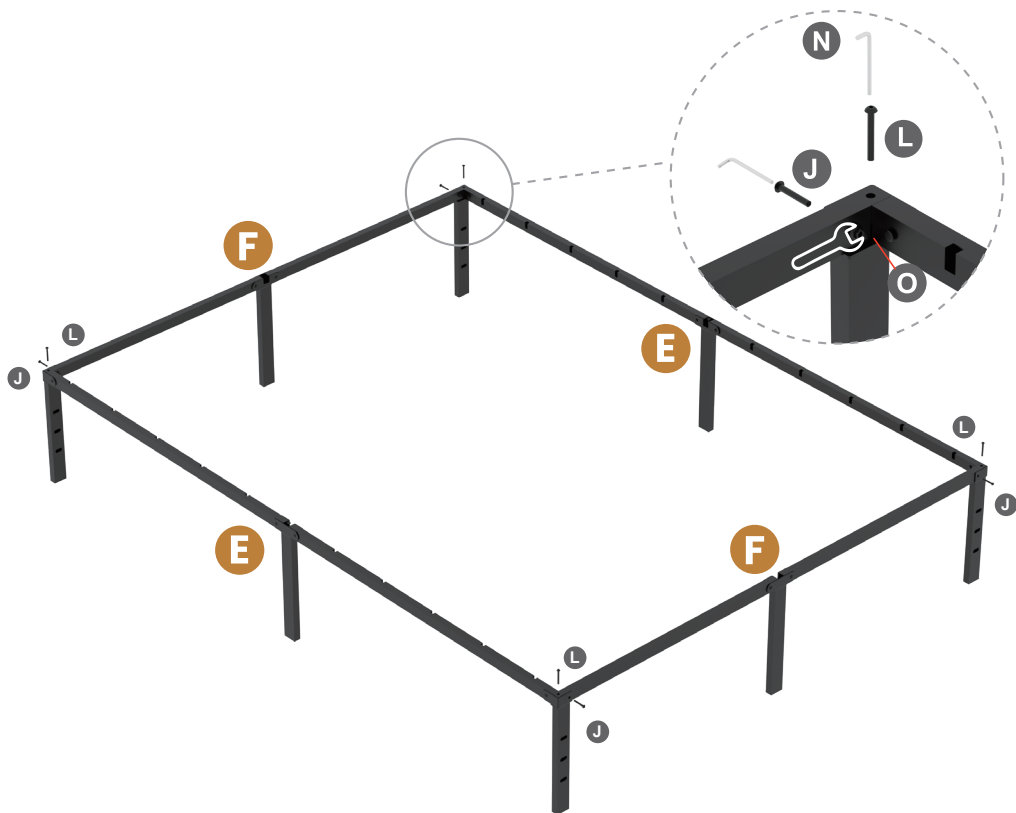

R



J



L



O



N



Note:


When tightening Bolt J and Nut O, use Allen Key N to hold the bolt head on one side.

Use Wrench R to tighten Nut O on the other side.

Do not tighten Nut O by hand only, as it may not be secured properly.

Step 4

(Unfold and lay out Part G as shown.)

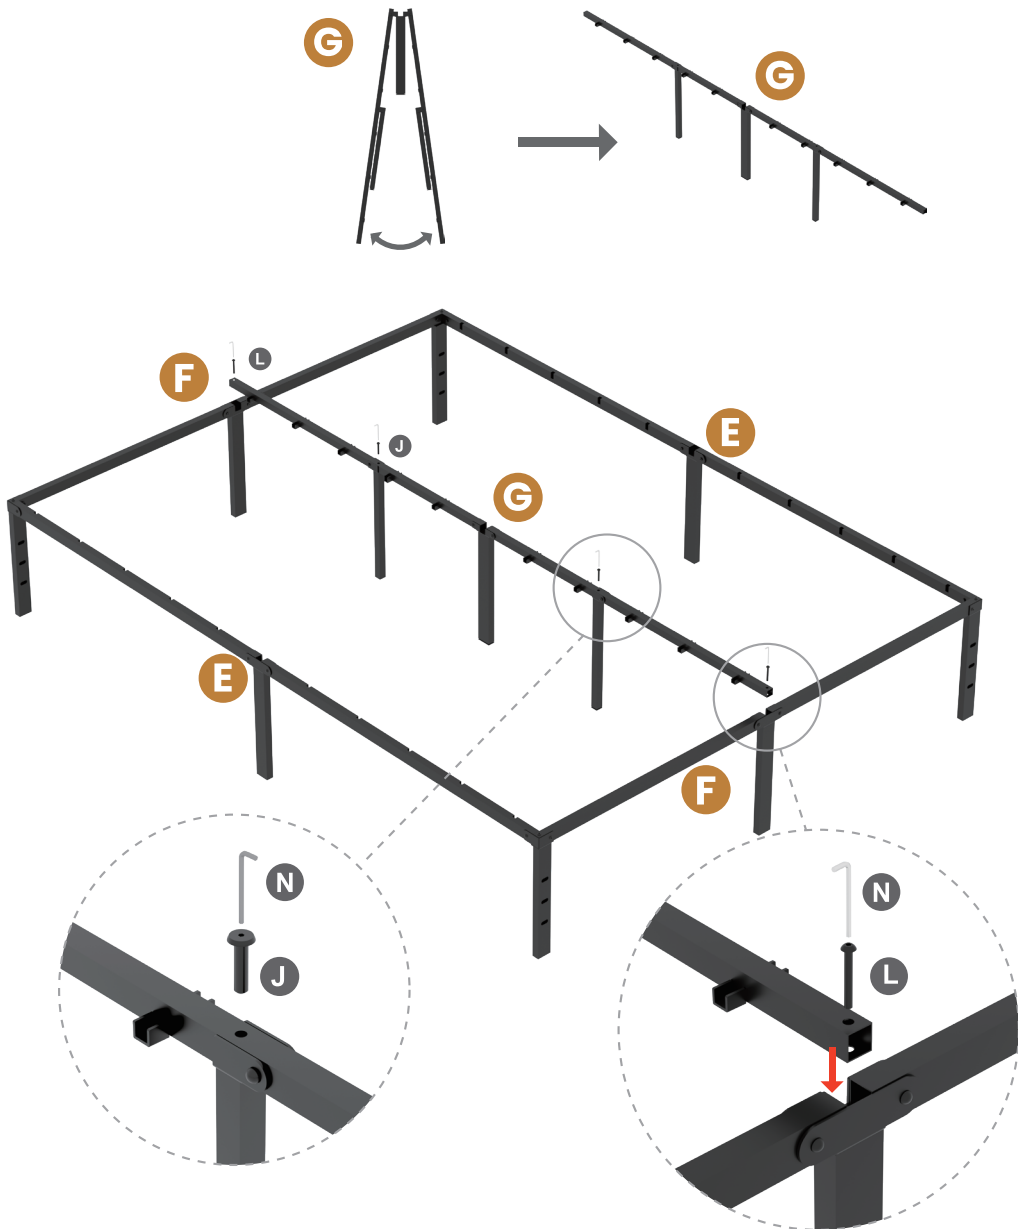

*Attach Part G to Part F using Bolt J as shown.


Step 5

Step 5-1: First connect the two Part P pieces as shown, then secure Part P to Part G using Screw J.

[1] Place one Part P onto Part G and align it with the screw hole.

[2] Interlock the two Part P pieces.


[3] Tighten Screw J for a secure fit.

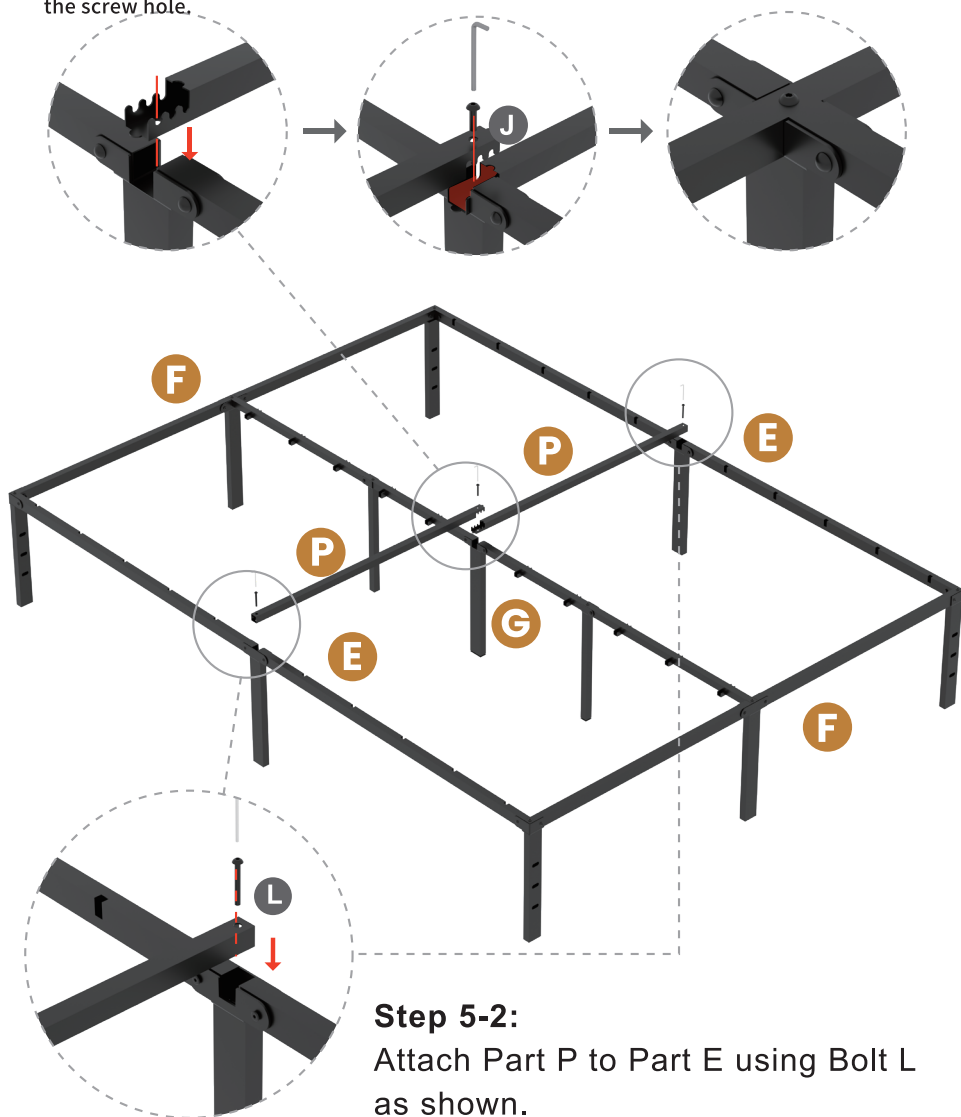

Step 5-2:

Attach Part P to Part E using Bolt L as shown.

Step 6

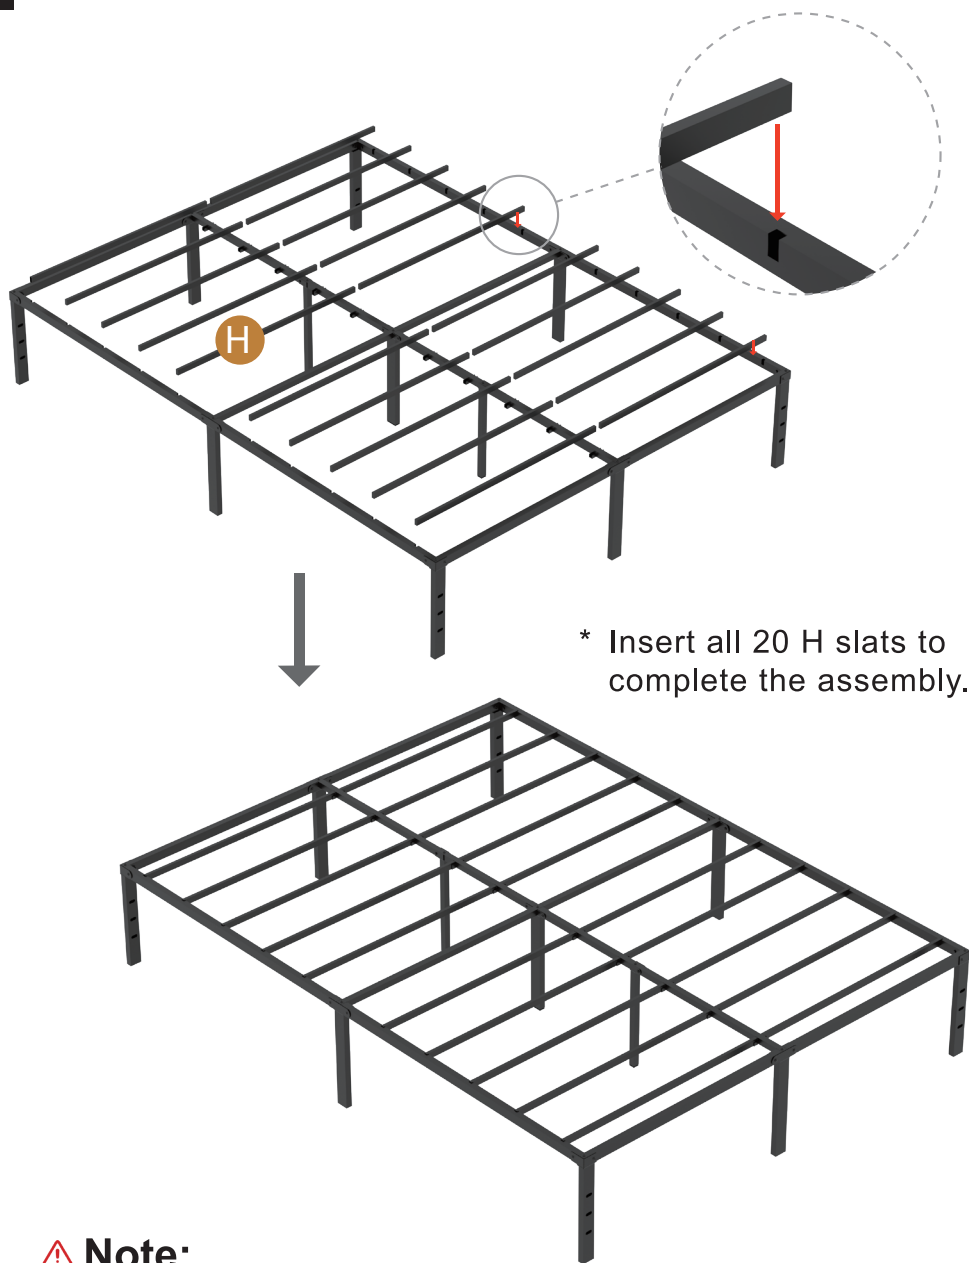

Note:

As the final step, make sure all screws are fully tightened.