


BED FRAME

Assembly Instructions

Model: HM-BF001MT

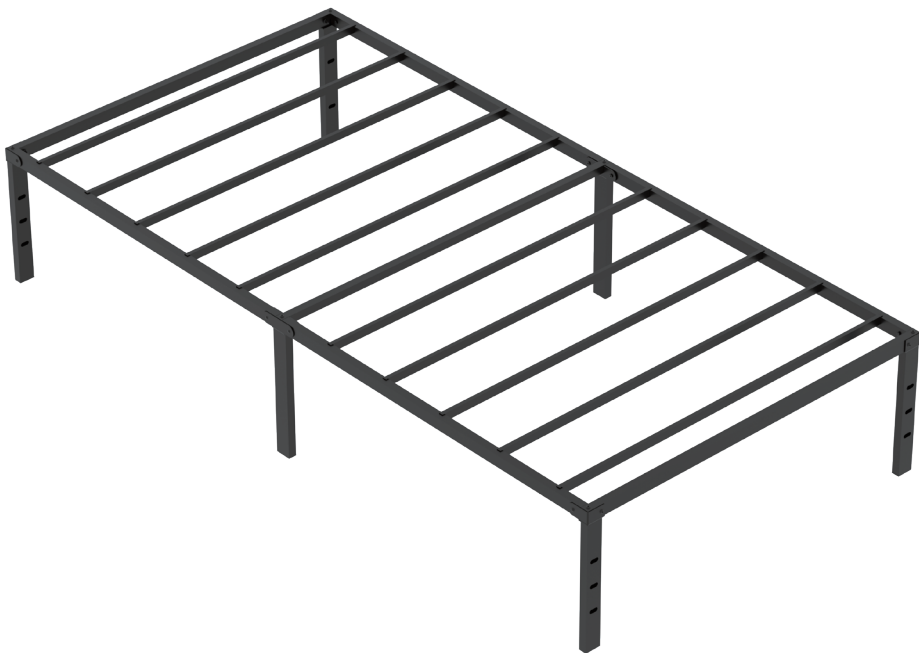

Give us a chance to make it right.

If you have any questions about the product, please do not hesitate to contact us through your order page. Thank you for your support!

Components

E



Qty: 2

F



Qty: 2

G



Qty: 1

H



Qty: 10

Hardware & Tools

L



M6×40 Bolt

Qty: 6


O



M6 Nut

Qty: 4

J



M6×35 Bolt

Qty: 4

N



Allen Key

Qty: 1

R




Wrench

Qty: 1

Step 1

(Unfold and lay out Part E as shown.)

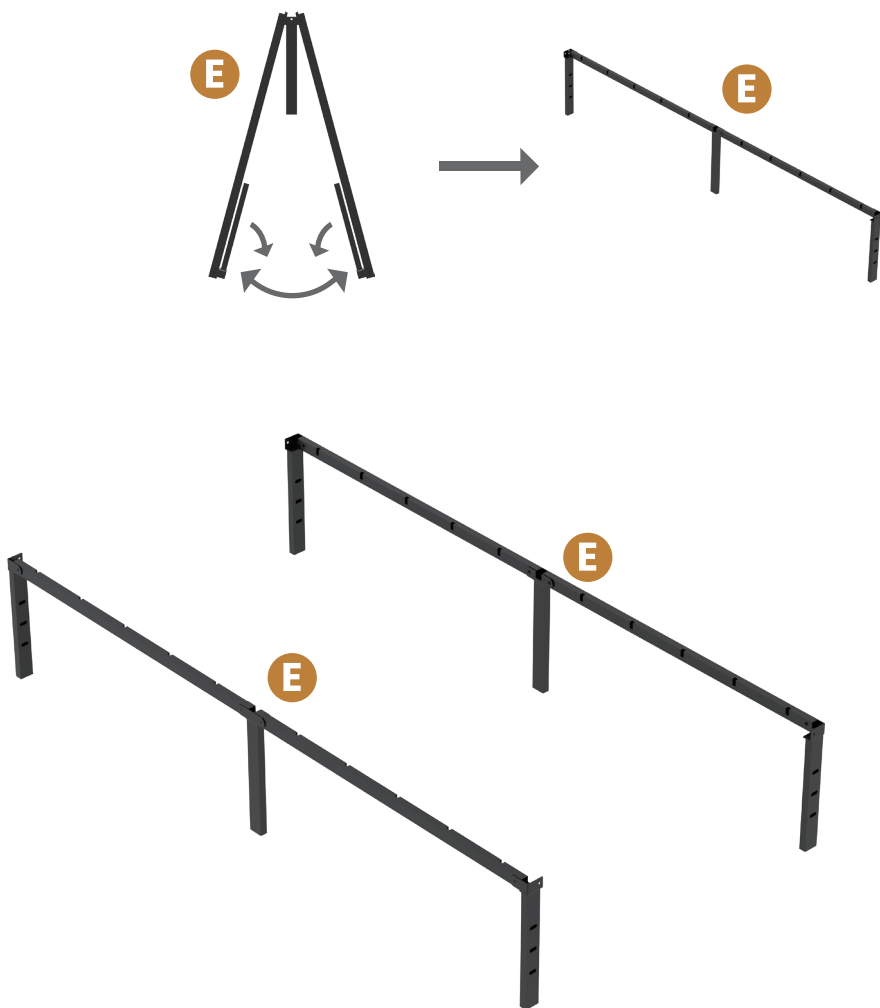


Note:

For easier assembly, do not fully tighten the screws until all parts are in place.


Step 2

(Unfold and lay out Part F as shown.)

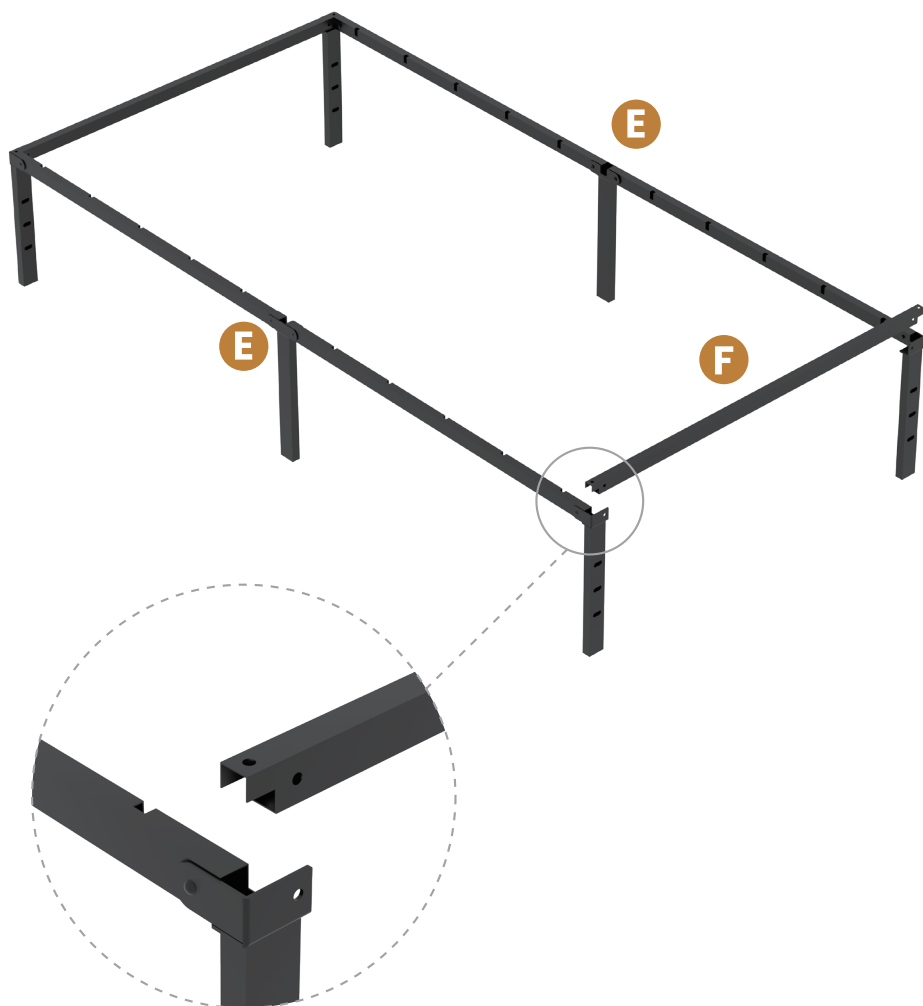

Step 3

(Attach Part E to Part F using Bolt L, Bolt J, and Nut O as shown .)

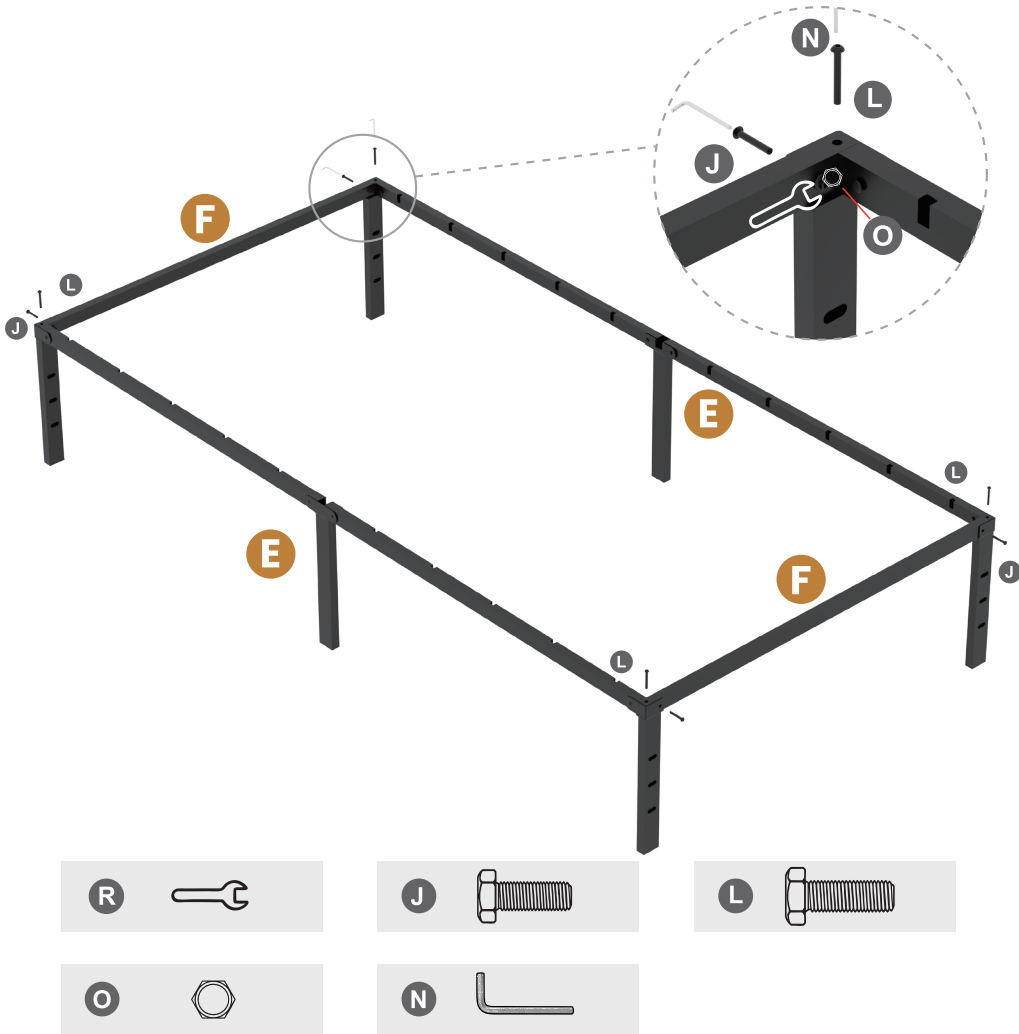

Note:


When tightening Bolt J and Nut O, use Allen Key N to hold the bolt head on one side.

Use Wrench R to tighten Nut O on the other side.


Do not tighten Nut O by hand only, as it may not be secured properly.

Step 4

(Unfold and lay out Part G as shown.)

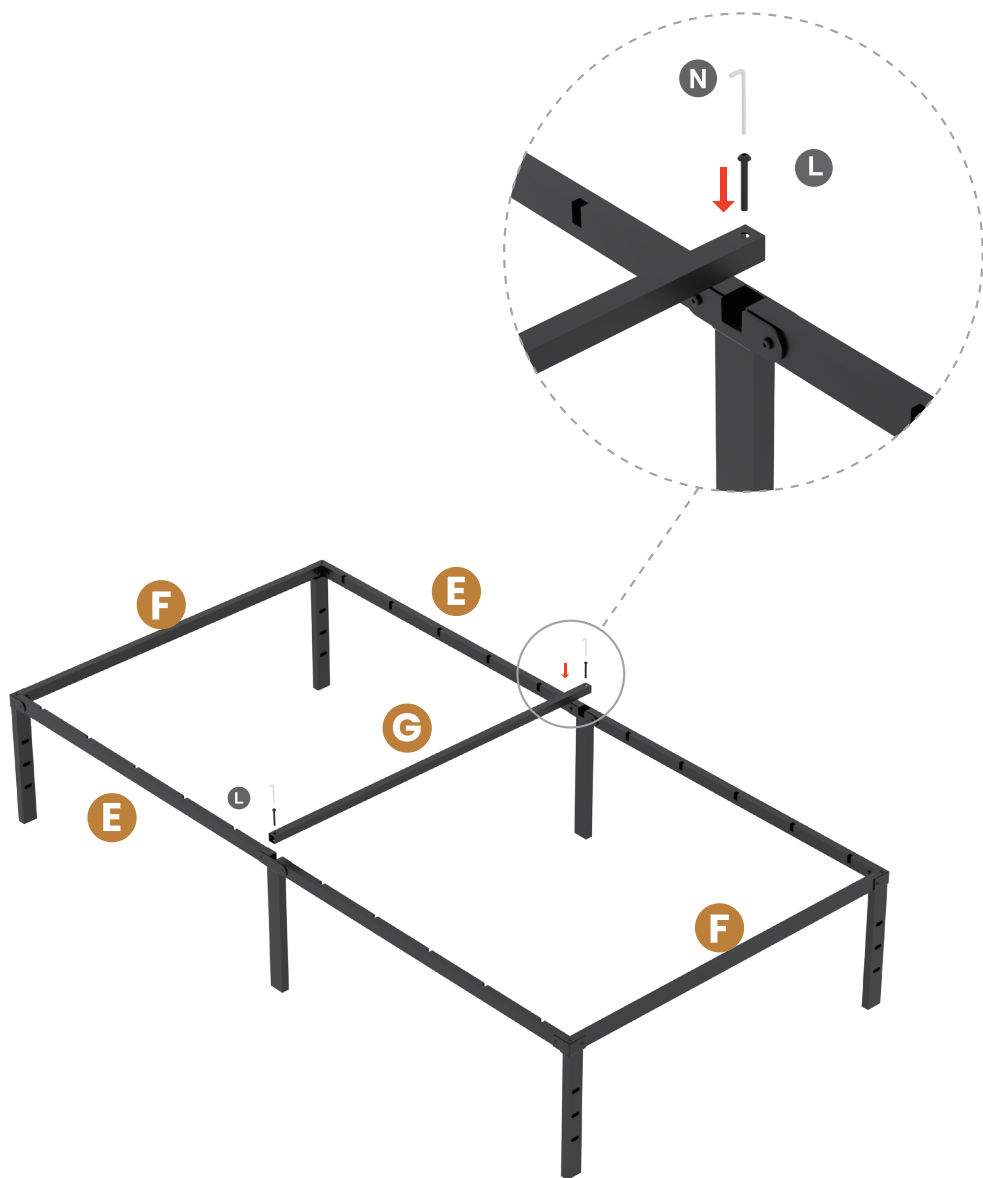

Step 5

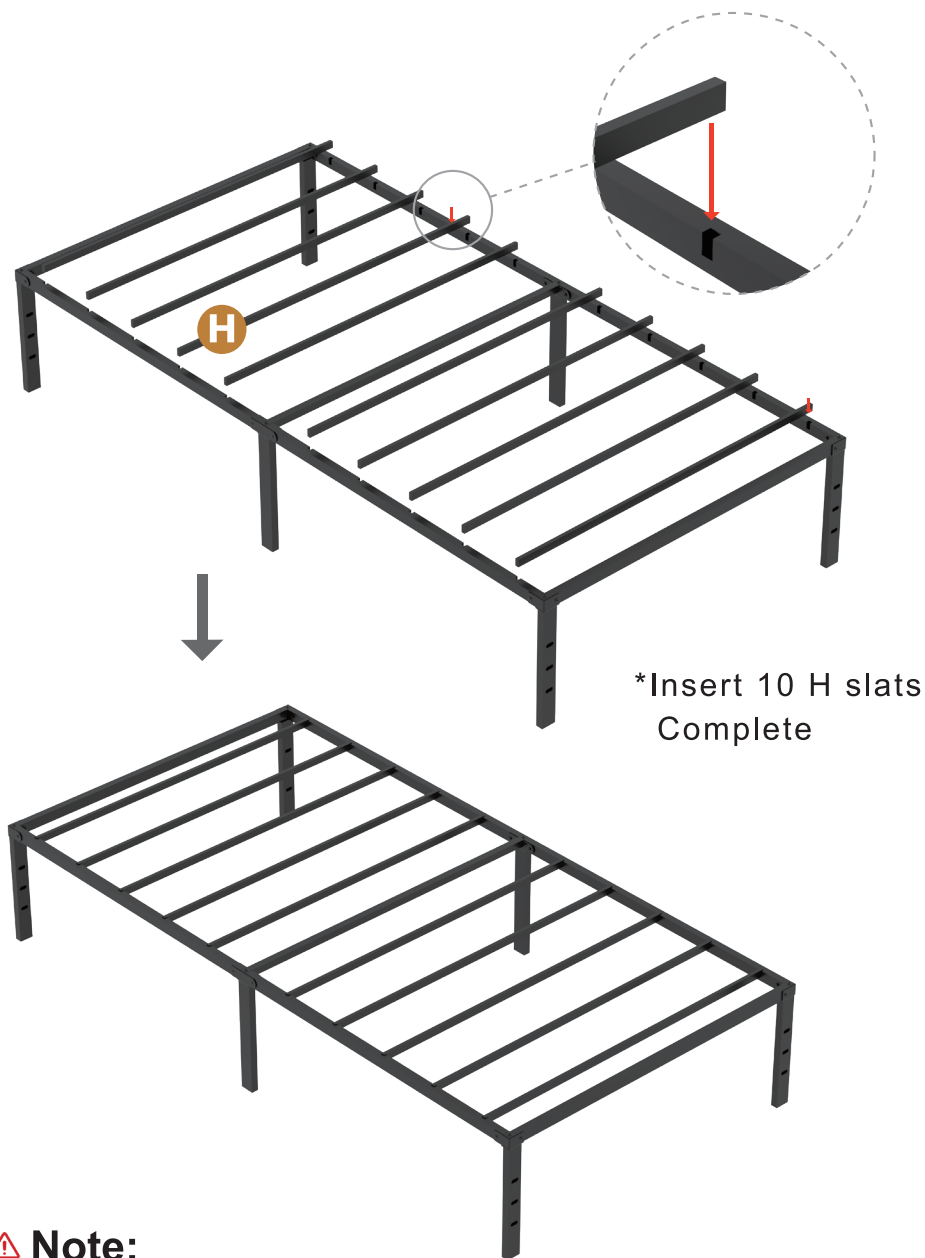

Note:

In the last step, please make sure all the screws are tightened.

